 
 


MicroIQ™ / Quick Guide / Locker Mode

1 Turn the knob to the unlocked position

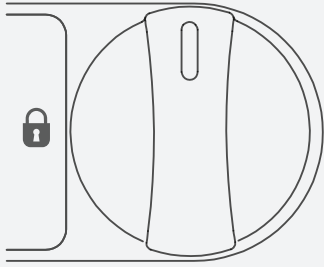

2 Remove the protective battery strip if present

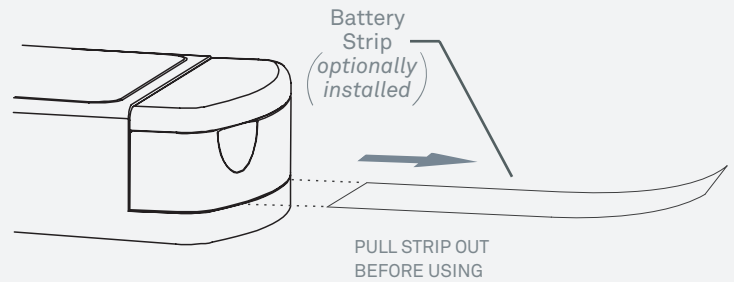

3 Add a one time User code (4 digits) to lock:

LOCK USING A SINGLE USE USER CODE (4 DIGITS)

new user code ● turn knob to lock 🟢 (3x) 🔴 (every 3 seconds)

Example: 1234 ● turn knob to lock 🟢 (3x) 🔴 (every 3 seconds)

Result: User code 1234 was created and the device was locked

4 Unlock with one time User code

UNLOCK USING A SINGLE USE USER CODE

new user code ● turn knob to unlock


Example: 1234 ● turn knob to unlock

Result: User code 1234 was used to unlock the lock.

Note: The user code created in locker mode is a one time code, and is erased when the MicroIQ is unlocked.

How to determine if the lock is in Station mode or Locker mode:

When the battery is first installed or when the battery strip is pulled, the LEDs will flash in a color sequence that indicates the operating mode of the lock. If the LEDs flash green, red, yellow, the lock is in Station mode. The LEDs sequence of green, yellow, red indicates Locker mode. This can be repeated by removing and reinstalling the battery.

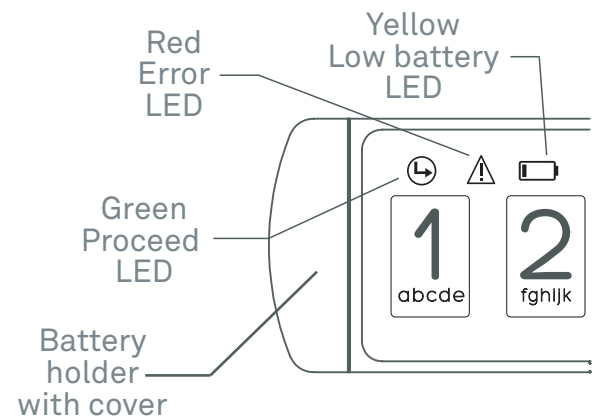

For full programming instructions or to switch the lock between Station and Locker mode, refer to the website: www.microiqlock.com/support