



MicroIQ™ / Quick Guide / Station Mode

- 1 Turn the knob to the unlocked position.

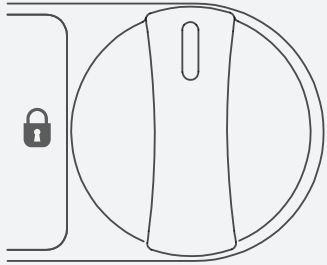

If locked, use the default Supervisor code 1-2-3 to open the lock and turn the knob to the unlocked position.

- 2 Remove the protective battery strip if present.

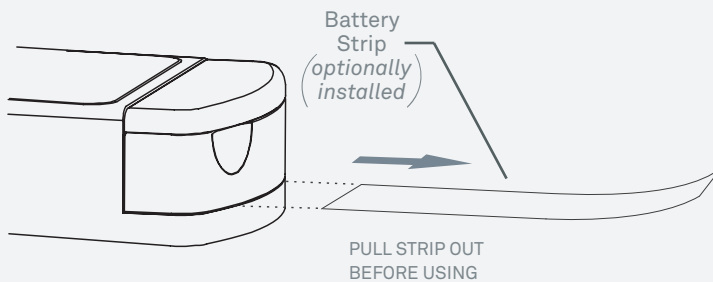


- 3 Change the Supervisor code (3-6 digits) as follows:

CHANGE THE SUPERVISOR CODE (3-6 DIGITS)	
Ⓟ ● old supervisor code	▲ new supervisor code Ⓟ ☀ (6x)
Example: Ⓟ ● 123 ▲ 4321 Ⓟ ☀ (6x)	
<i>Result: Supervisor code 123 was erased and supervisor code 4321 was added.</i>	

How to determine if the lock is in Station mode or Locker mode:

When the battery is first installed or when the battery strip is pulled, the LEDs will flash in a color sequence that indicates the operating mode of the lock. If the LEDs flash green, red, yellow, the lock is in Station mode. The LEDs sequence of green, yellow, red indicates Locker mode. This can be repeated by removing and reinstalling the battery.

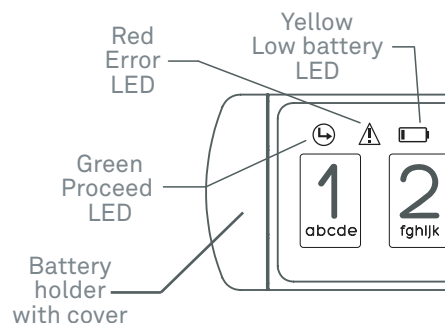

For full programming instructions or to switch the lock between Station and Locker mode, refer to the website www.microiqlock.com/support